



## American Tow Bar Installation & Removal Instructions

### Installation Instructions



Step 1: For installation, park both vehicles on a flat surface before towing.

Secure tow bar coupler on 2" ball hitch of tow vehicle (V-1.).



Step 2: Pull vehicle to be towed (V-2) within 4 feet of (V-1).

Place the emergency brake of (V-2) into the on position.



Step 3: Attach T-J hook combo into shipping slots.

T-hook portion placed in slot, usually works best.



Step 4: Thread tie down traps, Velcro end first into the hand ratchets.

After tie down straps are connected to shipping slots, release emergency brake on (V-2).



Step 5: Lift tow bar while tightening the hand ratchets. (V-2) will pull up against bumper stops.

Tighten tie down trap. Do not over tighten.



Step 6: Secure excess strap to tow bar by wrapping Velcro around tow bar and strap.

Repeat process on other side.



Step 7: Tie down straps should be secure so that there is no loose or excess strap.



Step 8: Cables should always connect vehicle to vehicle.

Route cables through upper ring handles. Criss-cross cables and secure cables to tow hitch of (V-1).




Step 9: Route other end of the cable through the lower ring handles and attach to (V-2). Use cable extensions to ensure proper connection.

Repeat process on other side.



Turn ignition key to unlock steering wheel. Release emergency brake. Re-tighten tie down straps if neccssaiy. You are now ready to tow.

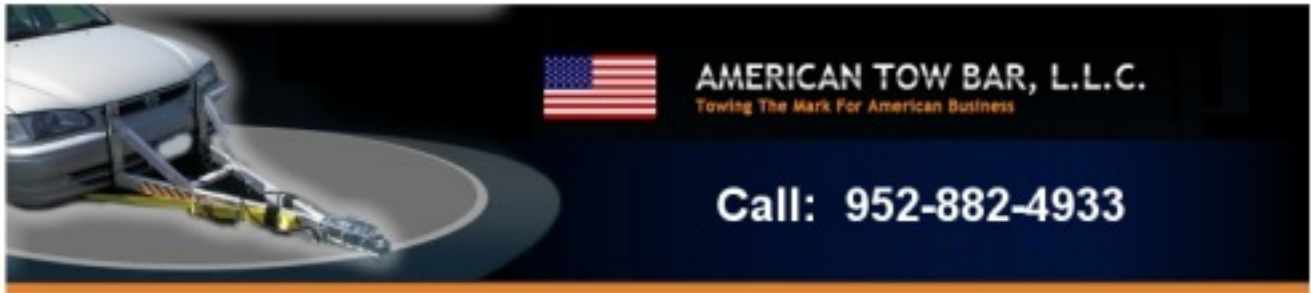

## American Tow Bar Installation & Removal Instructions

### Removal Instructions



Step I: To remove, park both vehicles on a flat surface.

Set emergency brake on (V-2).



Step 2: Open ratchet to loosen tow strap.



Step 3: Push ratchet all the way forward to unlock ratchet.



Step 4: Pull on loose end of tow strap to snap open the ratchet.



Step 5: After ratchet has been opened, pull tow strap through and out of the ratchet.

Repeat the process on the other side.



Step 6: Disconnect both cables with extensions from (V-2).



Step 7: Disconnect both cables from (V-1).



Step 8: Release emergency brake on (V-2) and back vehicle away.

Allow tow bar to rest on the ground.



Step 9: Remove tow bar from hitch of (V-1).



Step 10: After removal, collect tow straps, cables and extensions